

発行番号：HZD&E02-01、発行年月：平成14-05

標題

“圧力計、温度計の コードブックの紹介”について

対象機種：全機種

これまで取扱説明書のコードブックの部品の紹介の中に、圧力計、温度計が含まれておらず、部品の照会、発注に不便をお掛けしておりましたが、今後は部品名と合せて添付のコードブックのPLATE No.とITEM No.により部品の照会および発注をしていただくようお願い致します。



〈添付〉

PRESSURE GAUGE	PLATE 91501-01A
THERMOMETER	PLATE 91502-01A
REMOTE THERMOSENSOR	PLATE 91503-01A

日立造船ディーゼルアンドエンジニアリング株式会社

■連絡先

東京営業	/ TEL. (03) 3215-1722	FAX. (03) 3217-8588
大阪営業	/ TEL. (06) 6562-3411	FAX. (06) 6562-2900
技術サービス部	/ TEL. (06) 6562-3437	FAX. (06) 6562-4300
シンガポール支店	/ TEL. 65-6863-1490	FAX. 65-6861-7579
西日本地域		
(株)アイマックスディーゼルサービスグループ	/ TEL. (08452) 2-5491	FAX. (08452) 2-8416

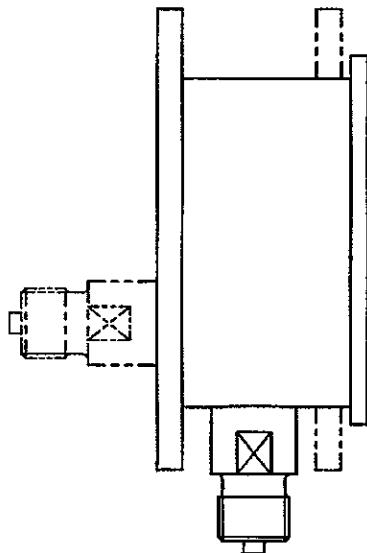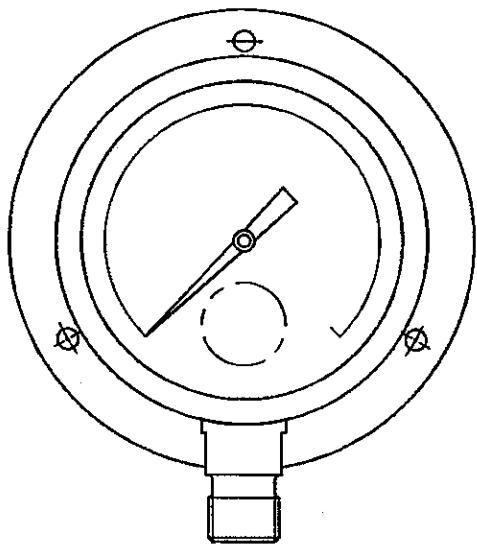

H01	H13
H02	H14
H03	H15
H04	H16
H05	H17
H06	
H07	
H08	
H10	
H11	
H12	



MC

PRESSURE GAUGE


PLATE 91501-01A

Item No.	Part Description
	On engine side
H01	Main bearing lube oil inlet
H02	Piston cooling oil inlet
H03	Camshaft bearing lube oil inlet
H04	Turbocharger lube oil inlet
H05	Fuel oil inlet
H06	Fuel oil inlet after overflow valve
H07	Cylinder cooling water inlet
H08	Scavenging air
H09	Control air
H10	Safety air
H11	Sealing air for exhaust valve
H12	Pilot pressure to actuator
	On emergency console
H13	Main bearing lube oil inlet
H14	Camshaft bearing lube oil inlet
H15	Turbocharger lube oil inlet
H16	Cylinder cooling water inlet
H17	Starting air


H01
H02
H03
H04
H05
H06
H07
H08
H09
H10
H11
H12
H13
H14
H15
H16
H17




Type A : Straight type

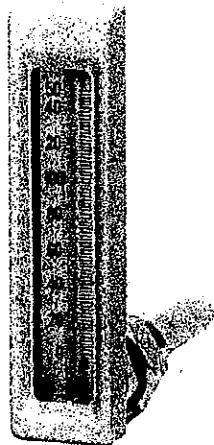

Type B : Angle type

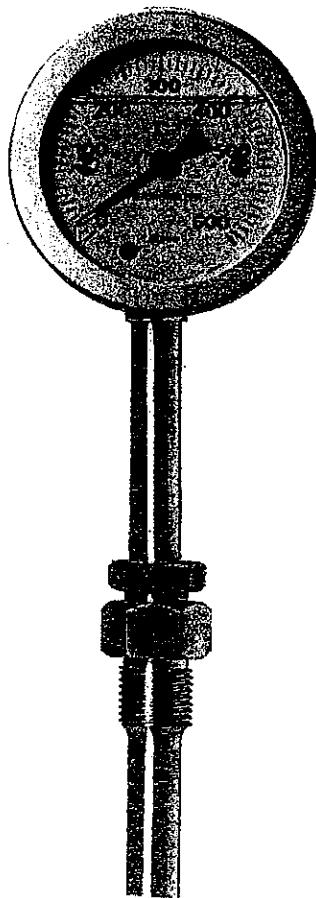

Type D : Dial type

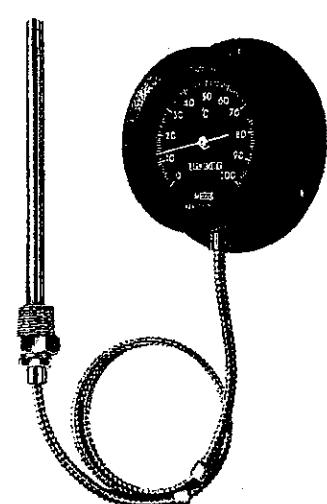

Type C : With capillary tube type



MC

THERMOMETER

PLATE 91502-01A


Item No.	Part Description
H01	Main bearing lube oil inlet
H02	Piston cooling oil outlet (each cylinder)
H03	Camshaft lubu oil inlet
H04	Camshaft lubu oil outlet
H05	Turbocharger lube oil inlet (MET, TPL)
H06	Turbocharger lube oil outlet (MET, TPL)
H07	Fuel oil inlet
H08	Cylinder cooling water inlet
H09	Cylinder cooling water outlet (each cylinder)
H10	Turbocharger cooling water outlet (VTR)
H11	Air cooler cooling water inlet
H12	Air cooler cooling water outlet
H13	Charge air before air cooler
H14	Charge air after air cooler
H15	Charge air scavenging air receiver
H16	Exhaust gas cylinder outlet
H17	Exhaust gas turbocharger inlet

Please state thermometer type and range.



REMOTE THERMOSENSOR

PLATE 91503-01A

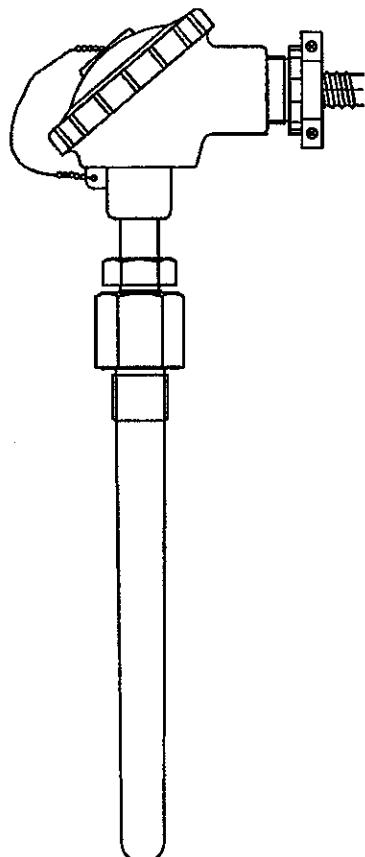

H01	H11
H02	H12
H03	H13
H04	H14
H05	H15
H06	H16
H07	H17
H08	H18
H09	
H10	



H19



MC

REMOTE THERMOSENSOR

PLATE 91503-01A

Item No.	Part Description
H01	Main bearing lube oil inlet
H02	Piston cooling oil outlet (each cylinder)
H03	Camshaft lube oil inlet
H04	Camshaft lube oil outlet
H05	Turbocharger lube oil inlet (MET, TPL)
H06	Turbocharger lube oil outlet (MET, TPL)
H07	Turbocharger lube oil (VTR)
H08	Fuel oil inlet
H09	Cylinder cooling water inlet
H10	Cylinder cooling water outlet (each cylinder)
H11	Turbocharger cooling water outlet (VTR)
H12	Air cooler cooling water inlet
H13	Air cooler cooling water outlet
H14	Charge air before air cooler
H15	Charge air after air cooler
H16	Charge air scavenging air receiver
H17	Exhaust gas cylinder outlet
H18	Exhaust gas turbocharger inlet
H19	Thrust pad